



How to Replace a Safety Disconnect Switch

000231 Cherry Snap Switch - White

Tools Needed

- Flathead Screwdriver or 1/4" Nut Driver
- Phillips Screwdriver



Questions?
Give us a call at 1-800-536-9495
or email support@ironaway.com




1 Turn off power at electrical entrance

Please disconnect all power to the unit at service entrance BEFORE attempting to service or rewire the unit.




2 Unscrew electrical raceway

With electricity shut off at service entrance, begin removing electrical raceway from unit. Remove screws at the top and bottom of raceway with a flathead screwdriver. Gently pull raceway out of unit, being careful of wires that are still connected.

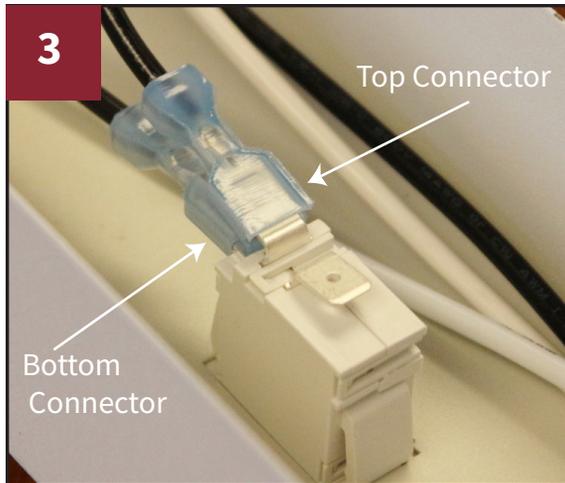


3 Remove switch connectors

Next, turn raceway and locate back of switch. There are two connectors coming from the unit. Remove the top connector and then the bottom. Note: This requires some gentle pulling force.

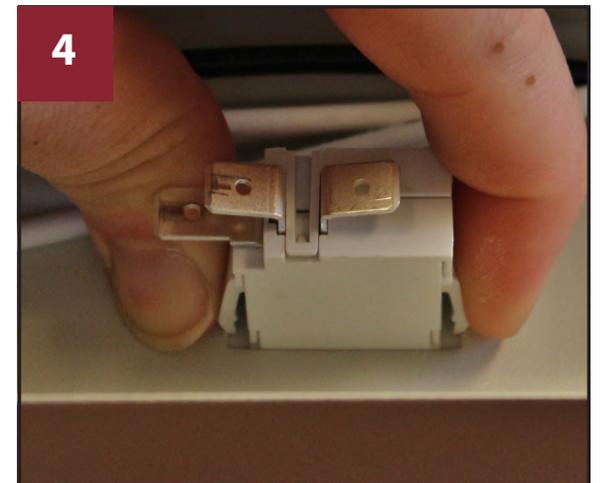

4 Begin removing switch

Now gently squeeze springs on sides of switch to depress. Push switch forward towards front of raceway.

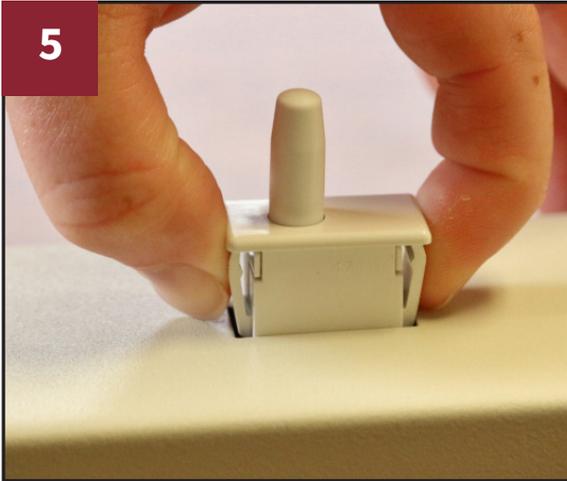

Pull out switch

Pull switch out of raceway from the front.




Place new switch

Gently squeeze the sides of the new switch and being putting it into place.



Placement

The side with two prongs stacked should be facing the top of the raceway, pointing towards the spotlight.

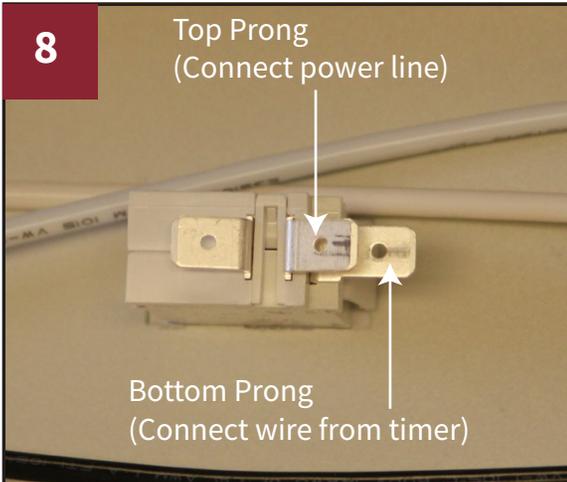

Connect new timer

Reconnect electrical connectors by first connecting the short wire coming from the timer to the bottom prong. Then connect the longer wire that your home's power is connect to the prong on the top.



Reconnect raceway

Reconnect the electrical raceway by re-installing the screws at the top and bottom, being care that no wires are pinched.

Once connected, you can restore power to the unit.

Installation Complete!

Questions?
Give us a call at 1-800-536-9495
or email support@ironaway.com

